

LineLazer IV Auto-Layout System PC Board Kit 289135 3900/5900/200HS

312345A



Important Safety Instructions.


Read all warnings and instructions in this manual. Save these instructions.

CAUTION

Electrostatic discharges can damage components on PC board. Use a ground strap when handling or installing PC board.

Using configurations other than those listed results in poor sprayer performance.

- 1 Refer to your sprayer repair manual for the procedures.
- 2 Do **Pressure Relief Procedure**.
- 3 Remove pressure control cover.
- 4 Remove PC board.
- 5 Cut out and remove the resistor(s) on PC board according to figure and table.
- 6 Install PC board.
- 7 Install pressure control cover.

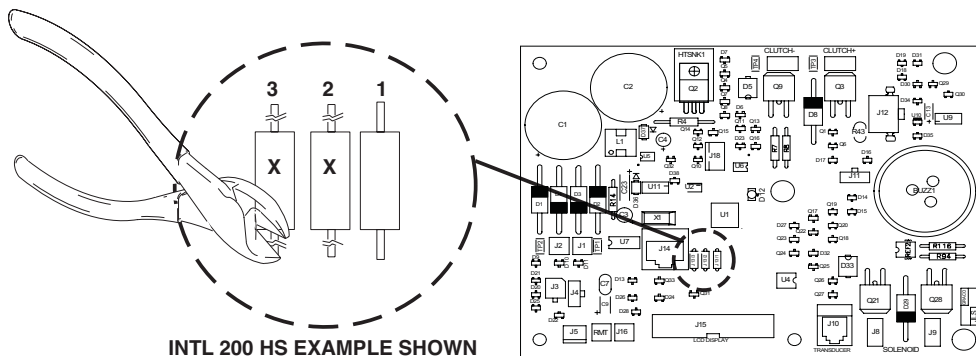

INTL 200 HS EXAMPLE SHOWN
CUT X TO SELECT THE CHOSEN MODEL.

ti10251a

	AUTOLAYOUT 3900		AUTOLAYOUT 5900		AUTOLAYOUT 200 HS	
	3900 Striper	Intl 3900 Striper	5900 Striper	Intl 5900 Striper	200 HS Striper	Intl 200 HS Striper
1	X		X		X	
2		X	X			X
3				X	X	X

ti10251a

Proven Quality, Leading Technology

Graco Information

TO PLACE AN ORDER, contact your Graco distributor, or call **1-800-690-2894** to identify the nearest distributor.

All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.

MM 312345

Graco Headquarters: Minneapolis
International Offices: China, Belgium, Japan, Korea
GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

<http://www.graco.com>

Written in U.S.A. 7/2007